


A32 front panel *Quick Start*

Guide – Manual Rev 0.0 (Feb 2026)


PACKING LIST

2x silkscreened front panels (type-1 and type-2)

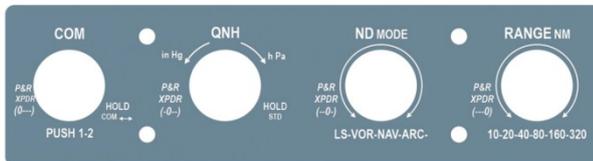

1x Allen key



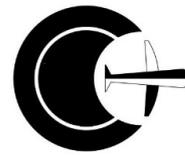

MOUNTING to rotAIR modules

Instructions:

- Unscrew the 4 bolts from each module
- Replace the front panels
- Screw the bolts back in place



Rotary 1 (SPD) front panel → Type-1 module

Rotary 1 (COM) front panel → Type-2 module