


vertical front panel

Quick Start Guide – Manual Rev 0.1 (Feb 2026)


PACKING LIST

2x silkscreened front panels (type-1 and type-2)

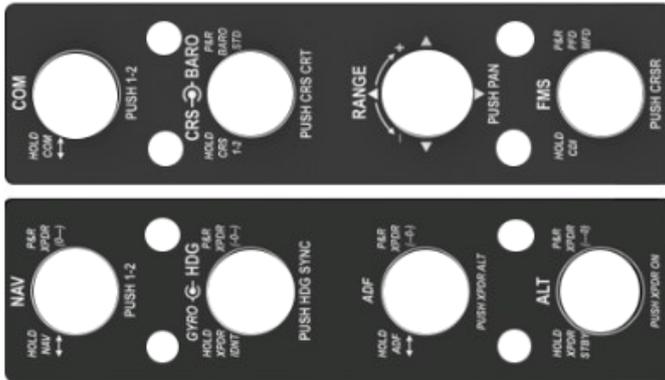

1x Allen key



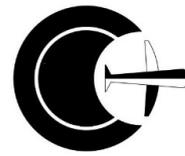

MOUNTING TO rotAIR MODULES

Instructions:

- Unscrew the 4 bolts from each panel
- Replace the front panel
- Screw the bolts back in place

